 





get started

install battery

- 1 Press cover release button.
- 2 Remove cover.

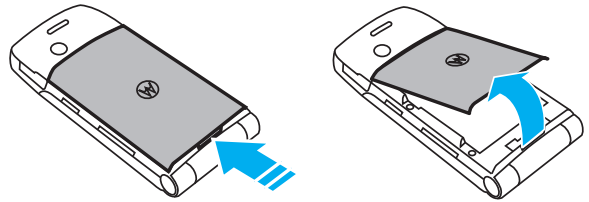

 
- 3 Insert battery.
- 4 Replace cover.

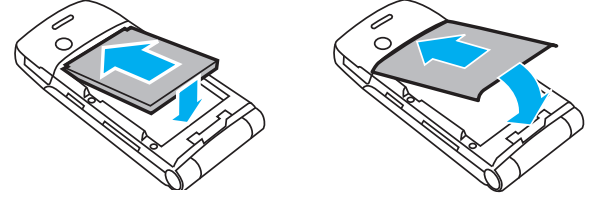

get started

charge battery

 
New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. The battery indicator in your phone's external display flashes during charging. When charging is complete, the battery indicator stops flashing, and your internal display shows **Charge Complete**.

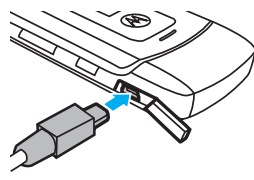

For tips on battery life and charging, see the "Battery Tips" panel.


get started

 
turn phone on & off

Press and hold  for a few seconds, or until the display turns on or off.



 
make a call

Enter a phone number and press .




 
answer a call

When your phone rings and/or vibrates, press .



 
end a call

Press .




basics

your phone

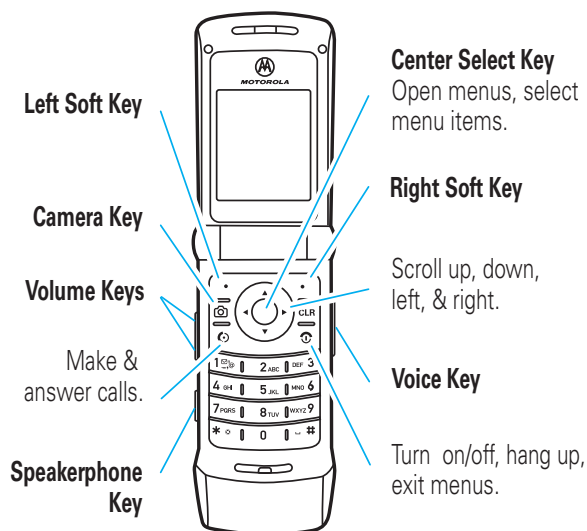

basics

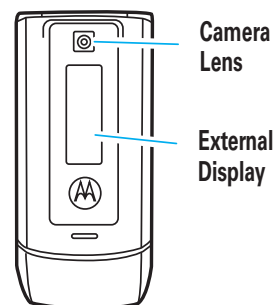 


Your phone's external display shows the time, date, status indicators, and notifications for incoming calls and other events.

basics

menus

 
- 1 Press the *center key*  to open the **Main Menu**.



- 2 Press the *navigation key*  up, down, right, or left, to highlight a menu option.




- 3 Press **SELECT** (the left soft key) to select the highlighted option.

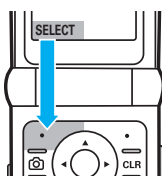

basics

emergency calls

To call an emergency number:

Press keypad keys to enter the emergency number, then press  to call it.



 
Your service provider programs one or more emergency phone numbers (such as 112 or 911) that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations. Sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

basics

status indicators

Status indicators show at the top of the home screen:

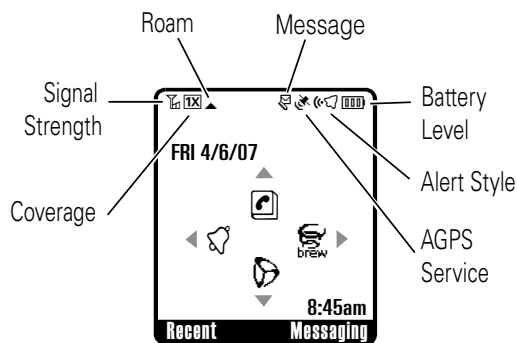

Note: Your phone's home screen may be different than the one shown above.

basics

menu map

- Alert Styles**
- Messaging**
 - Voicemail
 - Create Message
 - Message Inbox
 - Drafts
 - Outbox
 - Quick Text
 - Browser Alerts
 - Templates
 - Send to PixPlace
- Contacts**
- Recent Calls**
 - Received
 - Dialed
 - Notepad
 - Call Times
 - Data Times
 - Data Volumes
- Media Gallery**
 - Camera
 - Pictures
 - Sounds
- Tools**
 - Calculator
 - Datebook
 - Voice Records
 - Alarm Clock
 - Airplane Mode
- Settings**
 - Personalize
 - In-Call Setup
 - Security
 - Initial Setup
 - Network
 - Car Settings
 - Headset
 - Location
 - Connection
- Phone Status**
 - My Tel. Number
 - Active Line
 - Battery Meter
 - Software Updates
 - Other Information

Standard main menu layout. Your phone's menu may be different.

accessories

Bluetooth® Car Kit



USB Cable



Bluetooth® Headset



These and other accessories for your phone can be found at: www.motorola.com

For extended user guide and additional information on your phone, please visit: www.motorola.com/support

6809514A51-O

customize

change your phone's ring

To set a ringtone:

First, set **Style** to **Loud**, **Soft**, or **Vibe** then **Ring**:

Find it: > **Settings** > **Alert Styles** > **Style**

Next, change the **Style Detail** setting:

Find it: > **Settings** > **Alert Styles** > **Style Detail**

- 1 Scroll to **Calls** & press **Change**.
- 2 Scroll to a ringtone & press **Select**.

set phone to vibrate

Find it: > **Settings** > **Alert Styles** > **Style**

Scroll to **Vibrate** and press **Select**.

customize

set wallpaper & screen saver

Find it: > Settings > Personalize > Wallpaper

Find it: > Settings > Personalize > Screen Saver

- 1 Scroll to **Picture** and press **Change**.
- 2 Scroll to a picture & press the center key .
Select **[None]** to turn off wallpaper or the screen saver.

TIP

To extend battery life, turn off the screen saver.

connections

Bluetooth® wireless connections

Note: This feature requires optional accessories.

You can connect your phone to a Bluetooth headset, car kit, or other device.

Your phone currently supports these Bluetooth profiles:

- Headset
- Handsfree
- Dial Up Networking (DUN)
- Serial Port Profile (SPP)
- OBEX (OBject EXchange) profiles

Note: This phone does not support all OBEX profiles.

For more Bluetooth wireless connections support information, go to www.motorola.com/Bluetoothsupport.

For maximum Bluetooth security, always connect Bluetooth devices in a safe, private environment, away from other devices with Bluetooth connection capabilities.

connections

turn Bluetooth power on/off

Turn Bluetooth power on whenever the phone is on.

Find it: > Settings > Connection > Bluetooth Link > Setup

- 1 Scroll to **Power** and press **Change**.
- 2 Scroll to **On** and press **Select**.

place phone in discovery mode

Allow a Bluetooth device to discover your phone:

Find it: > Settings > Connection > Bluetooth Link > Find Me

pair with device

Before you try to connect to another Bluetooth device, your phone's Bluetooth power must be **On** and the device in *pairing* or *bonding* mode (see the user guide for the device).

Find it: > Settings > Connection > Bluetooth Link > Handsfree > [Look For Devices]

connections

Your phone lists devices it finds within range. If your phone is already connected to a device, that device is listed and identified with a ✓ (in-use indicator).

- 1 Scroll to a device in the list.
- 2 Press the center key to connect the device.
- 3 If the device asks to bond with your phone, press **YES** and enter the device PIN code (typically **0000**) to create a secure connection.

Note: See the device's instructions for its PIN code and other information.

When the connection is made, your phone displays the (Bluetooth) indicator or a **Bluetooth** message.

disconnect from device

Scroll to **Bluetooth** and select **Off**.



set Bluetooth options

Find it: > Settings > Connection > Bluetooth Link > Setup




images

 
take a photo

To get the sharpest photos, wipe the lens clean with a dry cloth before you take a photo.

To activate the camera:



Find it:   Media Gallery > Camera

Tip: You can also activate the camera by pressing the camera key .

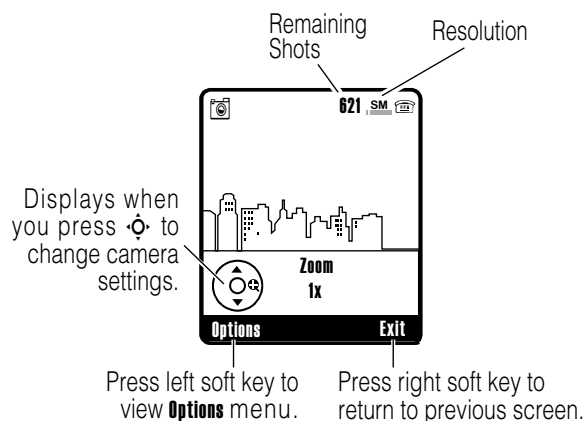

images

 Note: Your phone's screen may be different than the one shown.

- 1 Point the camera lens at the camera subject. Press  up and down **to zoom in and out.**
Press **Options** to open a menu that includes these options: **Go To Pictures, Auto-Timed Capture, Camera Setup, Free Space, Capture Title.**
- 2 Press the camera key  to take the photo.
- 3 Press **Options**, then select **Store Only, Discard, or Apply As.**

or

Press **Send** to save the photo and go to the **Send Options** screen. Then select **Send in Message** or **Send to PixPlace.**

Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section.

Service & Repairs

If you have questions or need assistance, we're here to help. Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license.

© Motorola, Inc., 2007.

 
 
Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.





inicio

instalar la batería

- 1 Oprima el botón de liberación de la cubierta.
- 2 Saque la cubierta.

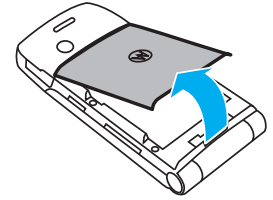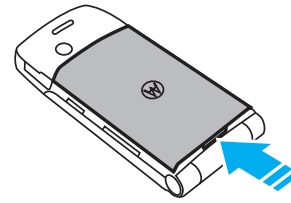

  
- 3 Inserte la batería.
- 4 Vuelva a colocar la cubierta.

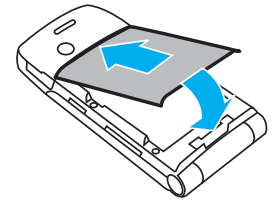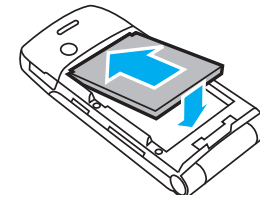

inicio

cargar la batería

 
Las baterías nuevas no están totalmente cargadas. Enchufe el cargador de la batería al teléfono y a una toma de corriente. El teléfono puede tardar varios segundos antes de comenzar a cargar la batería. El indicador de la batería de la pantalla externa del teléfono destella mientras el teléfono se carga. Cuando la carga finaliza, el indicador de la batería deja de destellar y la pantalla interna muestra **Carga completa**.

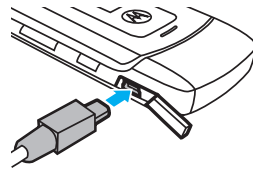

Para obtener consejos acerca de la duración y carga de la batería, consulte el panel "Consejos acerca de la batería".


inicio

encender y apagar el teléfono

Mantenga oprimida  durante unos segundos o hasta que la pantalla se encienda o apague.



realizar una llamada

Ingrese un número telefónico y oprima .



contestar una llamada

Cuando el teléfono timbre y/o vibre, oprima .



finalizar una llamada

Oprima .

 


aspectos fundamentales

el teléfono




aspectos fundamentales

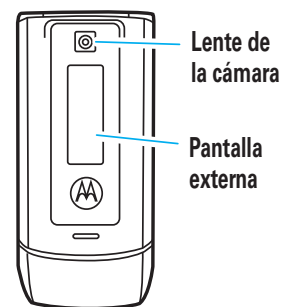


La pantalla externa del teléfono muestra la hora, fecha, indicadores de estado y notificaciones de llamadas entrantes y otros eventos.

aspectos fundamentales

menús

 
- 1 Oprima la *tecla central*  para abrir el **Menú principal**.



- 2 Oprima la *tecla de navegación*  hacia arriba, abajo, izquierda o derecha para resaltar una opción de menú.




- 3 Oprima **SELECR** (la tecla programable izquierda) para seleccionar la opción resaltada.

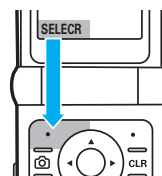

aspectos fundamentales

llamadas de emergencia

Llamar a un número de emergencia:

Oprima las teclas del teclado para ingresar el número de emergencia, luego oprima  para llamar.



Su proveedor de servicios programa uno o más números de emergencia (como 112 ó 911) a los cuales usted puede llamar en cualquier situación, incluso cuando su teléfono está bloqueado.


Nota: los números de emergencia varían según el país. Es posible que los números de emergencia preprogramados de su teléfono no funcionen en todas las ubicaciones. En ocasiones, una llamada de emergencia puede no cursarse debido a problemas con la red, ambientales o de interferencia.

personalizar

programar fondo de pantalla y protector

Búsqueda:  >  Programación > Personalizar
> Fondo de pantalla

Búsqueda:  >  Programación > Personalizar
> Prot. pantalla

- 1 Desplácese a **Imagen** y oprima **Cambiar**.
- 2 Desplácese hasta una imagen y oprima la tecla central .

Seleccione **[Ninguna]** para desactivar el fondo de pantalla o el protector.

CONSEJO

Para prolongar la vida útil de la batería, desactive el protector de pantalla.

conexiones

conexiones inalámbricas Bluetooth®

Nota: esta función requiere accesorios opcionales.

Puede conectar su teléfono a un audífono Bluetooth, equipo para automóvil u otro dispositivo.

El teléfono admite actualmente estos perfiles Bluetooth:

- Audífono
- Manos libres
- Acceso telefónico a redes (DUN)
- Perfil de puerto serie (SPP)
- Perfiles OBEX (Intercambio de objetos)

Nota: este teléfono no admite todos los perfiles OBEX.

Para obtener más información de soporte acerca de las conexiones inalámbricas Bluetooth, vaya a www.motorola.com/Bluetoothsupport.

Para una seguridad máxima de la **conexión Bluetooth**, siempre conecte los dispositivos Bluetooth en un entorno seguro y privado, alejado de otros dispositivos con capacidades de conexión Bluetooth.

conexiones

activar o desactivar la conexión Bluetooth

Active Bluetooth cada vez que el teléfono esté encendido.

Búsqueda:  >  Programación > Conexión
> Enlace Bluetooth > Config

- 1 Desplácese a **Potencia** y oprima **Cambiar**.
- 2 Desplácese a **Activado** y oprima **Selecr**.

colocar el teléfono en modo de detección

Permita que un dispositivo Bluetooth descubra su teléfono:

Búsqueda:  >  Programación > Conexión
> Enlace Bluetooth > Encuéntrame

asociar a un dispositivo


Antes de intentar conectarse a otro dispositivo

Bluetooth, asegúrese de que la conexión Bluetooth del teléfono esté en **Activado** y que el dispositivo esté en *modo de asociación* o *modo de vinculación* (consulte la guía del usuario del dispositivo).


Búsqueda:  >  Programación > Conexión
> Enlace Bluetooth > Manos libres > [Buscar dispositivos]

conexiones

El teléfono muestra los dispositivos que encuentra dentro del alcance. Si el teléfono ya está conectado a un dispositivo, el teléfono enumera ese dispositivo y lo identifica con un indicador ✓ (en uso).

- 1 Desplácese hasta un dispositivo de la lista.
- 2 Oprima la tecla central  para conectar el dispositivo.
- 3 Si el dispositivo solicita vincularse con el teléfono, oprima **SÍ** e ingrese el código PIN (normalmente 0000) para crear una conexión segura con éste.

Nota: consulte las instrucciones del dispositivo para conocer el código PIN y otra información.

Una vez establecida la conexión, la pantalla muestra el indicador  (Bluetooth) o un mensaje **Bluetooth**.

desconectar del dispositivo

Desplácese a **Bluetooth** y seleccione **Desactivado**.



programar opciones de Bluetooth

Búsqueda:  >  Programación > Conexión
> Enlace Bluetooth > Config



